




# How to use TapCon screws

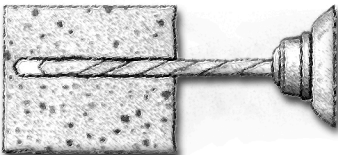

Drill a pilot hole approximately 1/4" deeper than the TapCon screw

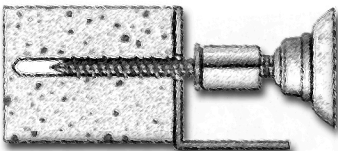

Position the attachment anchor and insert the TapCon screw.

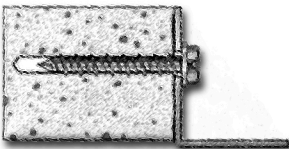

Drive the TapCon screw until seated.