



Technical Page on "Window Surrounds"

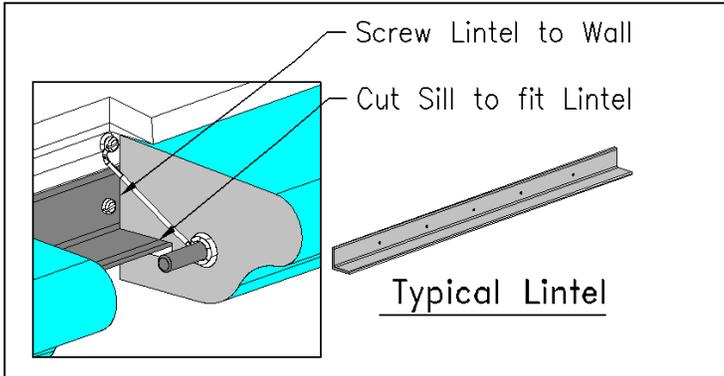


Lintel with Wire & Pin

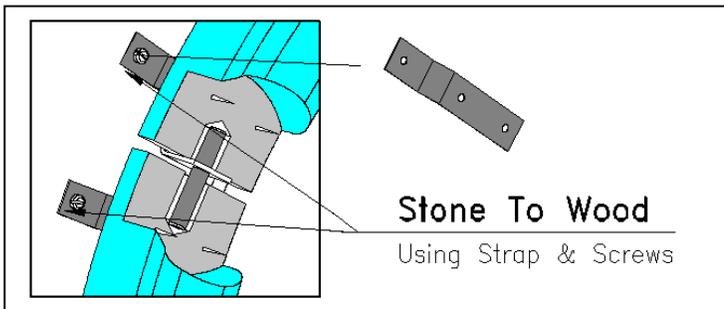

Strap, Tapcon Screws & Pin

Q How do I attach a window surround to a structure?


A Window Surrounds can be secured with several types of attachments. **L-brackets, Pins, Wire, TapCon Screws, Lintels, Straps and 2-Way Clips**

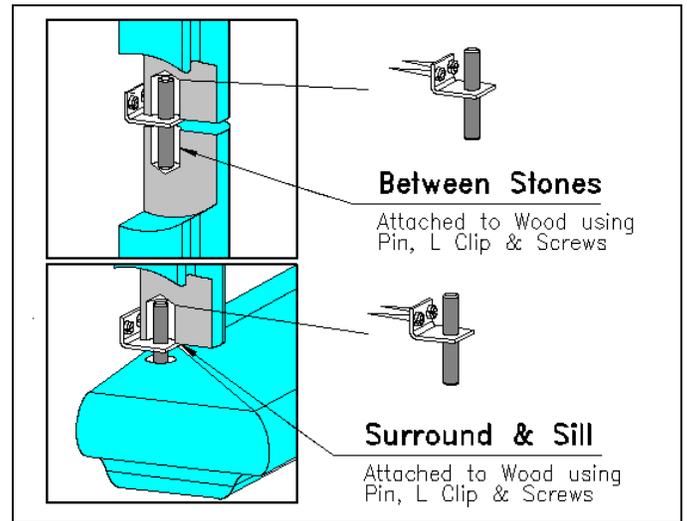


L-Bracket, Screws & Pin

Q How do I protect the internal structure from moisture?


A Flashing needs to be applied every time that there is a change of material such as brick to cast stone or stucco to cast stone. Different materials contract and expand at different rates due to temperature changes. Place flashing between the different materials so that moisture will drain out.

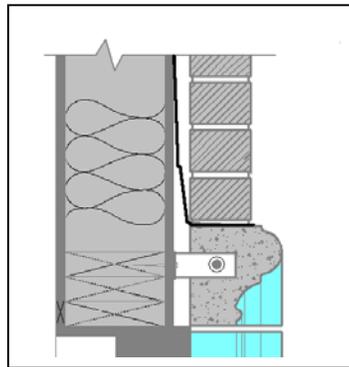

Flashing above Surround

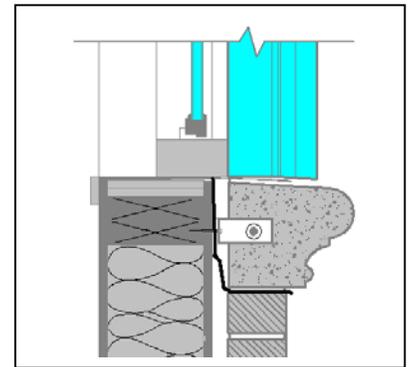

Flashing below Sill

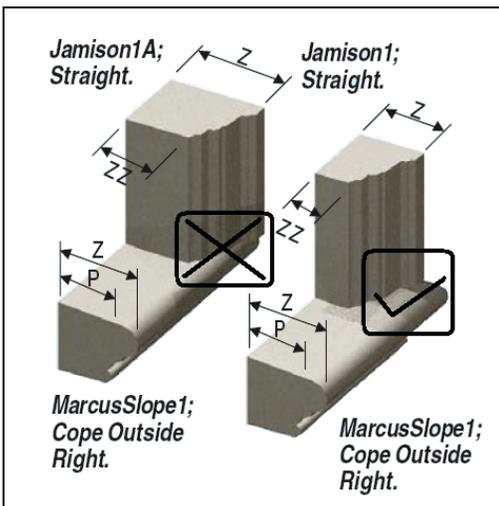

Q What is the significance of the Alphabetical dimensions on the profile drawings?

A The Alphabetical dimensions allows us to define and catalog all profiles in an organized manner. For instance, It is easy to compare the depth of a surround "Z" dimension" to the "P" dimension of the sill ensuring that they would fit properly.